

FOUNTAIN PLUMBING 101

FIGURE 1. FOUNTAIN PLUMBING SCHEMATIC

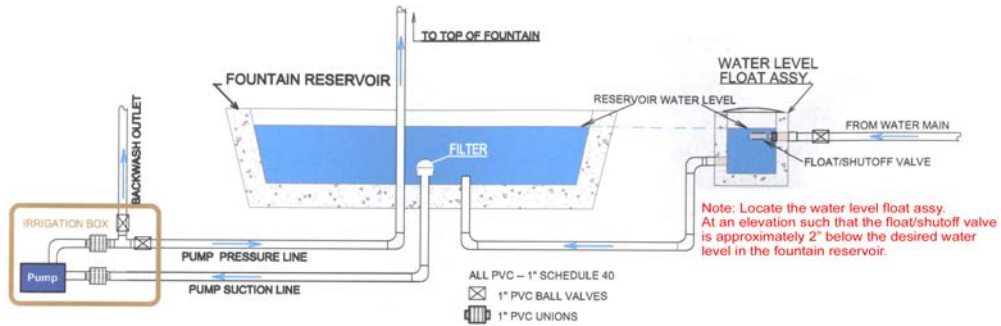


FIGURE 2. PUMP & MANIFOLD

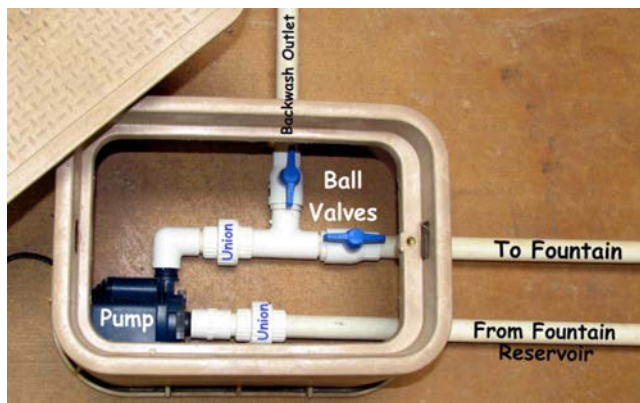


FIGURE 3. WATER LEVEL FLOAT ASSEMBLY

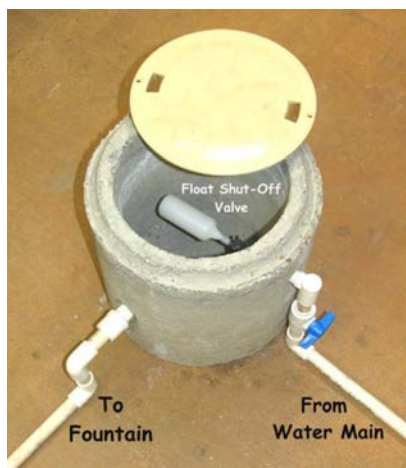


FIGURE 4. WATER LEVEL



As noted in the schematic above, the WATER LEVEL FLOAT ASSEMBLY must be positioned at an elevation such that the float valve itself is approximately 2” below the water level in the reservoir.

The FLOAT VALVE, shown in the photo below, has a provision for minor adjustments of the water level. An example of a suction line FILTER is also included in the photo.

