Fig. 1 Fountain Plumbing Schematic

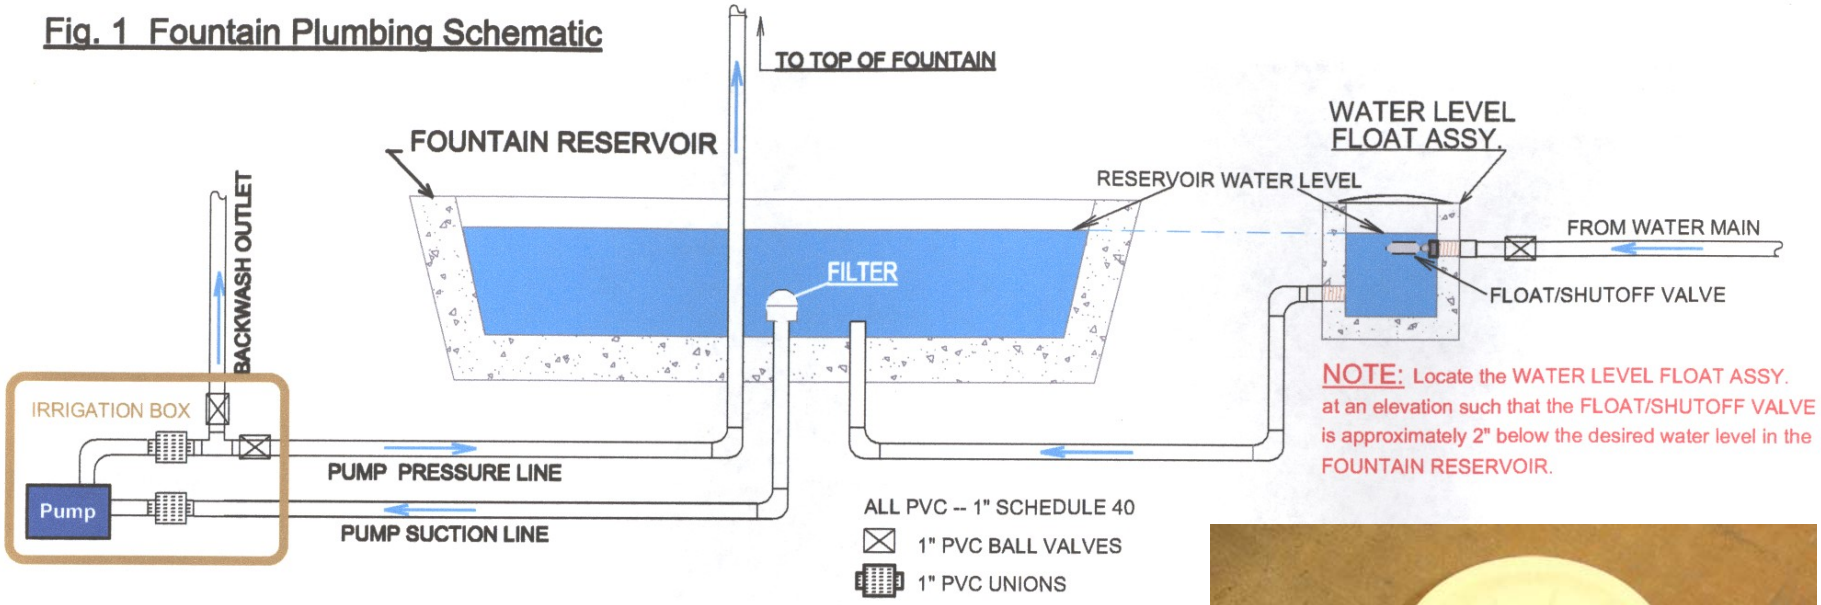

NOTE: Locate the WATER LEVEL FLOAT ASSY. at an elevation such that the FLOAT/SHUTOFF VALVE is approximately 2" below the desired water level in the FOUNTAIN RESERVOIR.

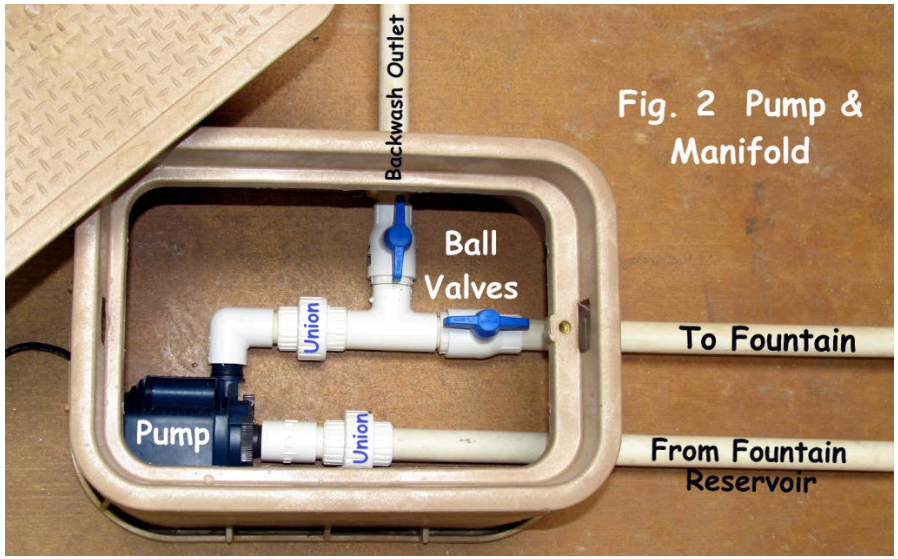

Fig. 2 Pump & Manifold

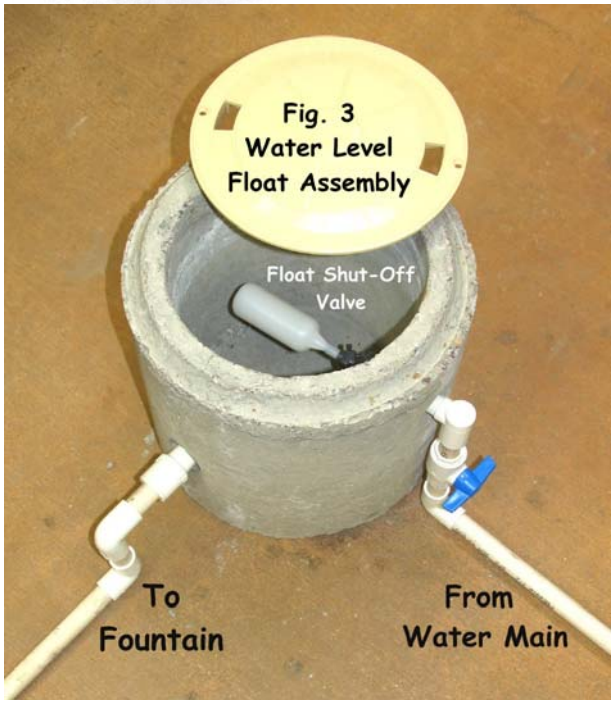

Fig. 3 Water Level Float Assembly

The Green Goddess ©89
INTERIOR FOLIAGE COMPANY

Plant & Garden Accessories
(602)-971-8110 Fax: (602)-971-0212
http://www.greengoddess.com
4139 E. Bell Rd., Phoenix, AZ. 85032

Fountain Plumbing - 101